



Note: The above configuration is for a Gaseous fueled engine. For Gasoline add the positive and negative to (Plns 5 and 18) to the Ford 42 pin connector. From those pins go directly to the fuel pump. Do not directly ground the fuel pump.

ENGINE DISTRIBUTORS INC.

Drawn by: KL	12/3/2012
EMS Pro to EDI Ford Engine	Rev 0